

# Release Notes

## 3.7.4

- When the Enable signal is off, the Error signal will turn on